


hameco

HS-55

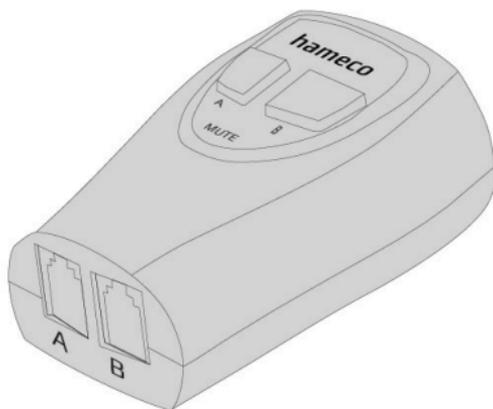


User Manual

1. ACCESSORIES INCLUDED



Training Adapter Base

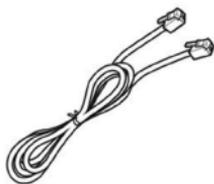



Connecting Cord




User Manual

- Training Adapter for Two People
- Easy to Install
- Simple & Compact Design
- Mute Button
- Two Combinations for Compatibility

2. DIAGRAM

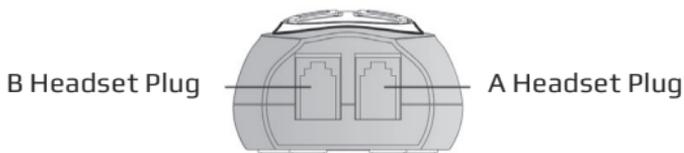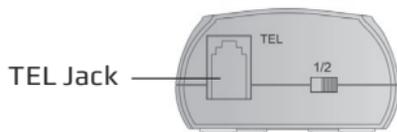

2. INSTRUCTIONS FOR USE

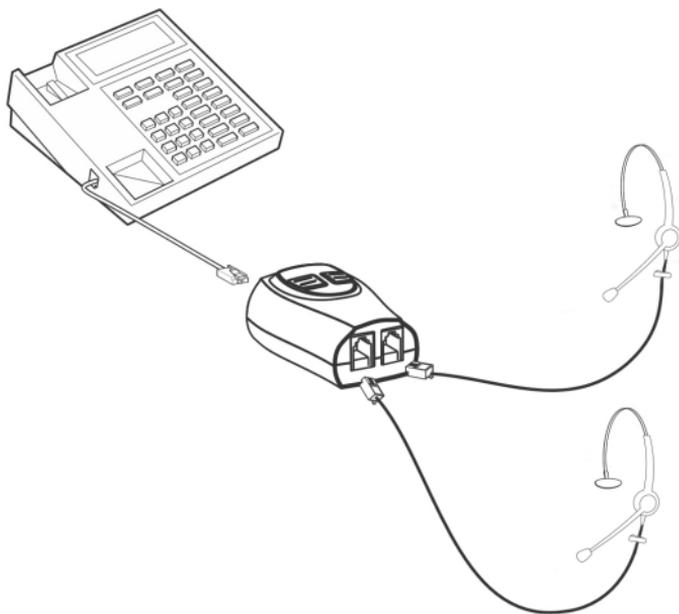

1. The training adapter for telephone or amplifier allows three people to talk at the same time.
2. The product is designed to allow an experienced user educate a beginner during his / her training period through a three-way conversation.
3. There are two mute buttons on the devices for two users.
4. For compatibility, select button '1' and '2'.

3. INSTALLATION AND FUNCTION

1. Connect the training adapter to a telephone or an amplifier with an RJ-9 modular plug.
2. Adjust the selection switches to the required setting. (*Tip: location '1' is compatible with Plantronics headsets, and '2' is compatible with GN Netcom.
3. Put two headsets into Port 'A' and 'B'.
4. Turn the phone or amplifier on to hear or transmit the sound through either headset.
5. Press the A and B mute buttons to test the microphone's mute function.

4. PRECAUTION BEFORE USE

1. This training adapter is only compatible with Plantronics or Hameco type headsets, and may not be compatible with other headsets. Please check compatibility before purchasing. (*Hameco headset wire arrangements are the same as GN Netcom's.)
2. We recommend purchasing this device together with the headset.
3. If you would prefer to use a different headset, telephone or amplifier, we recommend you use our 'HS-44' multi swich.

5. NOTICE

Maintenance & Service

- Please ensure that the products are kept clean.
- Check the batteries if the transmit or receive volumes fluctuate.

Guarantee

- This product is manufactured under strict quality and production process control.

DISPOSAL OF YOUR PRODUCT



Municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

